

**10 ZONE DMX WALL CONTROLLER**

The AgiLight 10 Zone DMX Wall Controller manages lighting scenes and moods from a sleek touch-sensitive display. Program and save unique transitions, rolls and fades with ease – up to 500 preset scenes! Choose between full spectrum color or variable color temperature control. Universal protocol DMX controllers can control any lighting module that supports DMX protocol.

- Manage 2 universes of 512 DMX channels
- Change color, brightness, speed and scene
- 5 - 6V DC input
- Visible scene display on LCD
- Touch capacitive
- Programmable with ESA2 PC/Mac software
- Up to 500 preset scenes on 10 zones
- Available in black and white
- Memory stored on SD card




**Applications:**

- |               |               |             |
|---------------|---------------|-------------|
| Commercial    | Hospitality   | Residential |
| Entertainment | Museums       | Retail      |
| Healthcare    | Public Spaces |             |



**DIMENSIONS**

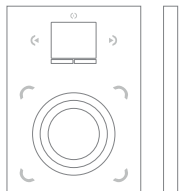

**Width:** 4.17 in (106 mm)  
**Length:** 5.75 in (146 mm)  
**Depth:** 0.43 in (11 mm)

**ORDERING GUIDE**

STANDARD

Category


**DMXCTRLD**

DMXCTRLD - 10 Zone Wall Controller

AgiLight does not warrant or represent that the information is free from errors or omission. The information may change without notice and AgiLight is not in any way liable for the accuracy of any information printed and stored or in any way interpreted or used.

SPECIFICATIONS / COMPONENTS / FEATURES

COMPONENTS

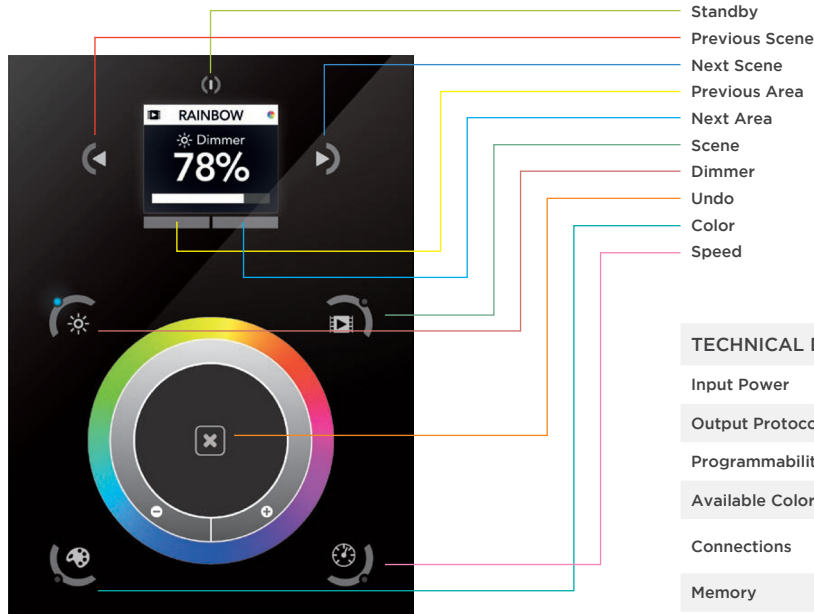

TECHNICAL DATA

Input Power	5-6V DC 0.6A
Output Protocol	DMX512 (x2)
Programmability	PC, Mac, Tablet, Smartphone
Available Colors	Black
Connections	USB, Ethernet, RS232, Clock, 8 dry contact ports, open drain output (for relay)
Memory	microSD (32Gb Max)
Temperature	14° - 113° F (-10° - 45° C)
Battery	LIR2032
Mounting	Single or double-gang wall socket
Dimensions	5.75 x 4.17 x 0.39 in. (146 x 106 x 10 mm)
Weight	0.54 lb (247 g)
Standards	EC, EMC, ROHS, ETL

KEY FEATURES

Sleek glass design which sits 11mm from the wall	USB & Ethernet connectivity for programming and control
Graphical color display to show selected environment	RS232, Dry Contact Ports and an Infra Red input port
Color/dimmer/speed palette	Clock and calendar with Sunrise/Sunset triggering
Color temperature mixing	Network communication. Control lighting remotely
Touch sensitive buttons. No mechanical parts	Catalog of designs including black and white glass
Touch sensitive wheel allows for accurate color selection	OEM customization of the color palette and logo
Multi-zone microSD memory	Windows/Mac software to set dynamic colors/effects
Multi-room control with 500 scenes, 10 zones	iPhone/iPad/Android remote and programming apps
1024 DMX channels. Control 340 RGB modules	

**NOTE:** Connector ports can be damaged by excessive force. Be gentle when connecting and disconnecting RJ45/Ethernet cables. Use of excessive force will void any warranty.

**GUIDE**

**IPHONE/IPAD/ANDROID CONTROL**

The controller can be used with one of 3 different apps. Each available at Google Play and the App Store.

**DMX Lightpad 3**      Designed to work seamlessly with the controller, DMX Lightpad 3 provides an easy way to control your lights over a local WiFi network. Use the wheel to change the dimmer, color or speed, and the arrows to select scenes and effects just like the wall panel. Swipe down to reveal quick access scene selection buttons.

**Easy Remote**      Create an entirely customized remote controller for your tablet or smartphone. Easy Remote is a powerful and intuitive app allowing you to easily add buttons, faders, color wheels and more. Connect to a WiFi network and the app will find all compatible devices.

**Acolis**      The Acolis application is a comprehensive tool allowing you to directly control and re-program the controller from your smartphone or tablet. This is a simple application which can be used by just about everyone in any situation. Mobile, easy to use and powerful, Acolis is the ideal controller for dimming or switching traditional, LED and RGB color mixing DMX lighting modules. Program static and dynamic lighting scenes and effects. Acolis is compatible with Android devices only.

**PROGRAMMING THE CONTROLLER**

The controller be programmed from a PC, Mac, Tablet or Smartphone using the software available on our website. Refer to the corresponding software manual for more information. The firmware can be updated using the Hardware Manager which is included with the programming software.

ESA Pro Software (Windows) - Timeline + Multi-Zone      <http://www.nicolaudie.com/en/esapro.htm>

ESA2 Software (Windows/Mac) - Single Zone      <http://www.nicolaudie.com/esa2.htm>

Hardware Manager (Windows/Mac) - Firmware, clock, etc.      <http://www.dmxsoft.com/global/ftp/hardwaremanager.zip>  
<http://www.dmxsoft.com/global/ftp/HardwareManager.dmg>

**COLOR TEMPERATURE MIXING**

In addition to mixing RGB using the color palette, it's also possible to mix up to three custom colors. This is useful for mixing color temperature. To set this up, choose the correct profile for your lighting module when programming the controller. Profiles for common channel configurations can be found in the 'Generic' folder:

RGBW for Red, Green, Blue, White  
 RGBA for Red, Green, Blue, Amber  
 RGBY for Red, Green, Blue, Yellow  
 WWCW for Warm White, Cold White

Once your show has been written to the controller, tap the color mode button and use the circular palette to change the color. If your lighting module has more than 3 color channels, tap the color mode button a second time to mix the additional colors.

**SERVICE**

Servicable parts include:

- Memory card - used to store the scenes
- Battery - used to store the clock/calendar
- DMX Chips - used to drive the DMX (see p2.)

\*To replace the Li-Ion rechargeable battery on the DE3:

1. You need a rechargeable 3.6v LIR 2032 replacement battery
2. Remove the back panel by pulling down and sliding it out.
3. Using a paper clip push the battery from the bottom so it slides out of its cage.
4. Slide the replacement battery in from the top, making sure the positive side is facing up.
5. Replace the back panel by pushing it up into place.

**NOTE:** Connector ports can be damaged by excessive force. Be gentle when connecting and disconnecting RJ45/Ethernet cables. Use of excessive force will void any warranty.

AgiLight does not warrant or represent that the information is free from errors or omission. The information may change without notice and AgiLight is not in any way liable for the accuracy of any information printed and stored or in any way interpreted or used.

**GUIDE**

**SETTINGS MENU**

To access the settings menu, hold the standby button for 3 seconds.

- Use the arrow buttons or palette to scroll through the menus
- Use the area buttons to navigate forwards and backwards
- The 'undo' button can also be used to navigate forwards

<b>Mode (M)</b>	Manages the on/off button and the 4 modes (dimmer, speed, color, scene)
<b>Arrows (A)</b>	Allows you to adjust which modes can be controlled by the arrows
<b>Palette (P)</b>	Allows you to adjust which modes can be controlled by the palette wheel
<b>Scene (S)</b>	Scene management
<b>First Start (F)</b>	Default settings when the unit is first powered up
<b>Trigger (T)</b>	Manages the controllers external triggering properties
<b>Ethernet (E)</b>	Enables the Ethernet socket on the controller
<b>Date/Time (D)</b>	Manages the date and time stored inside the controller
<b>Graphics (G)</b>	Screen management
<b>DMX Output (X)</b>	Manage the timings of the DMX output messages and the page priorities (advanced function!)
<b>Sensitive (S)</b>	Manage the touch sensitivity settings
<b>Language (L)</b>	Change the language of the text which appears on the screen
<b>About</b>	Check the firmware release date and version number, and then assign a name for the controller

**TROUBLESHOOTING**

<b>All LEDs on the controller are flickering</b>	<p>There has been no show file detected on the SD memory card.</p> <ul style="list-style-type: none"> <li>• Try formatting the SD card in the computer</li> <li>• Try re-writing the show file</li> <li>• Try replacing the SD memory card</li> </ul>
<b>The lights are not responding</b>	<ul style="list-style-type: none"> <li>• Check the DMX +, - and GND are connected correctly</li> <li>• Check that the driver or lighting module is in the DMX mode</li> <li>• Be sure that the DMX address has been set correctly</li> <li>• Check there are no more than 32 devices in the chain</li> <li>• Check that the DMX LED is flickering to the right of the SD card</li> <li>• Connect with the computer and open Hardware Manager (found in the software directory). Open the DMX Input/Output tab and move the faders. If your modules respond here, it is possibly a problem with the show file.</li> </ul>
<b>All LEDs on the controller are flickering except the standby LED</b>	<p>There is no SD card detected.</p> <ul style="list-style-type: none"> <li>• Check the SD card is properly connected</li> <li>• Check the SD card is 32Gb or less in size</li> <li>• Try formatting the SD card to FAT16 or FAT32 in the computer</li> <li>• Try re-writing the show file</li> <li>• Try replacing the SD memory card</li> </ul>
<b>4 Mode LEDs on the controller are flickering</b>	<p>The controller is in bootloader mode; this a special 'startup mode' which is run before the main firmware loads.</p> <ul style="list-style-type: none"> <li>• Check that there is nothing metallic touching the back of the controller</li> <li>• Try re-writing the firmware with the latest Hardware Manager</li> <li>• Try formatting or replacing the SD card</li> </ul>
<b>The controller is not detected by the computer</b>	<ul style="list-style-type: none"> <li>• Be sure that the latest software version is installed</li> <li>• Connect by USB and open the Hardware Manager (found in the software directory). If it's detected here, try updating the firmware</li> </ul>
<b>Cannot write show</b>	<ul style="list-style-type: none"> <li>• Use HardwareManager to write an Empty Show</li> <li>• Format your SD card to FAT format without Quick option</li> </ul>

**DISPLAYED ERROR MESSAGES**


You may see one of the following messages on the LCD display:

<b>INIT SD</b>	If this message is frozen, it means the controller is having a problem initialising the SD card
<b>NO SD CARD</b>	No SD card detected
<b>DATA ERROR</b>	The controller can read the SD card, however, it can't understand the data on it
<b>EMPTY SD</b>	The SD card is empty
<b>CAPSENS</b>	<p>Problem with the touch sensitivity chip detected.</p> <ul style="list-style-type: none"> <li>• Remove USB cable from controller</li> <li>• Update firmware to 1.09 or later</li> <li>• If above does not solve it, contact support</li> </ul>
<b>ERROR xx</b>	<ul style="list-style-type: none"> <li>• Try rewriting your show</li> <li>• Contact support with error number</li> </ul>
<b>RTC QUARTZ</b>	Contact support

AgiLight does not warrant or represent that the information is free from errors or omission. The information may change without notice and AgiLight is not in any way liable for the accuracy of any information printed and stored or in any way interpreted or used.

**CONNECTIONS**

**WIRING DIAGRAM**

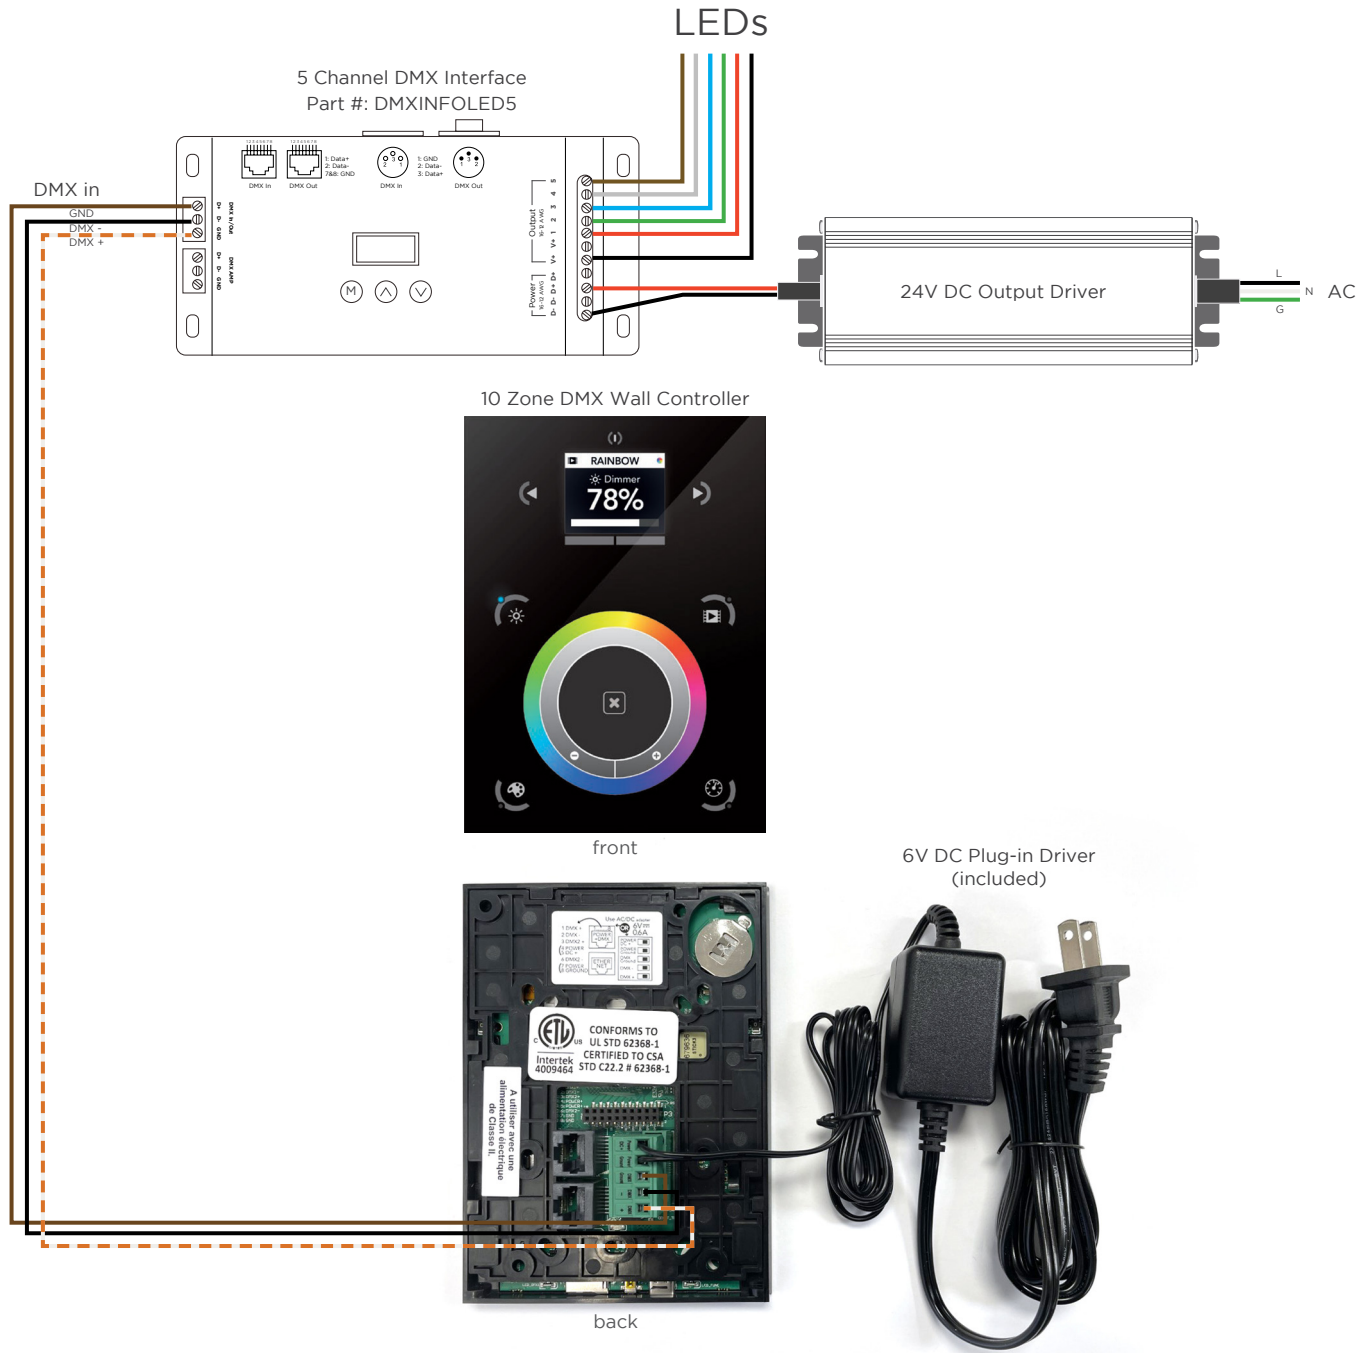

AgiLight does not warrant or represent that the information is free from errors or omission. The information may change without notice and AgiLight is not in any way liable for the accuracy of any information printed and stored or in any way interpreted or used.

REV.15JAN2025

GLOBAL HQ	EUROPEAN HQ	MEINA HQ	ASIA-PACIFIC HQ
320 Murray Hill Pkwy East Rutherford, NJ 07073 U.S. T: (+1) 212 629 6830 E: Sales-US@GENLEDBrands.com	Hogeweysealaan 119 1382 JK Weesp Netherlands T: (+31) 346 235 000 E: SalesEurope@GENLEDBrands.com	PO Box 371378, #823, Building 4EA Dubai Airport Free Zone Dubai, UAE T: (+971) 4 701 7901 E: SalesMEINA@genlebrands.com	Room 402, Building D Shenshi Tongchuang Science and Technology Park No. 16 Hongyin Road Xingqiang Community, Xinhua Street Guangming District, Shenzhen, China 518107 Sales: (+86) 139 1836 3905 Office: (+86) 755 8529 0710 E: Sales-Pacific@GENLEDBrands.com