




1. Measure the desired path of the channel and mark the location of the mounting clips. Drill pilot holes and fasten the mounting clips to the surface to be mounted to.

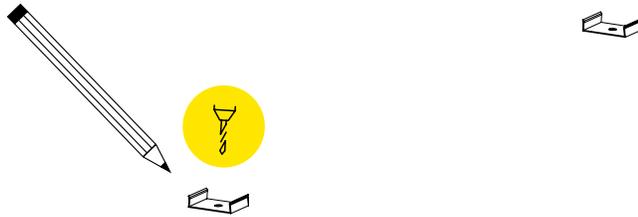


2. Align the channel with the mounting clips and push downward to snap the channel in place.

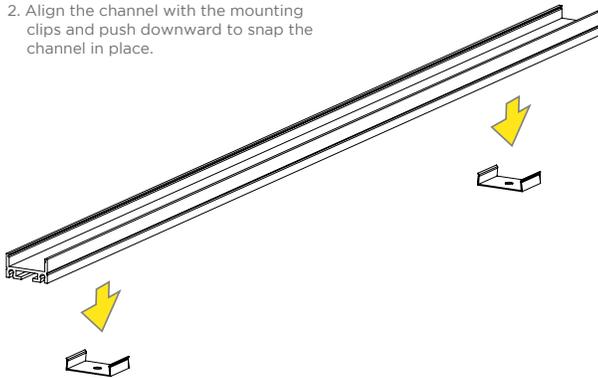


3. Clean the channel mounting surface free of dust and debris using a cloth and rubbing alcohol.

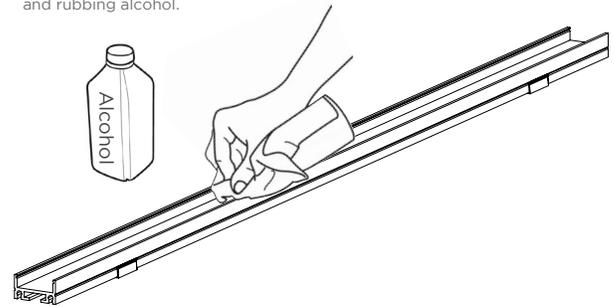


4. After the surface has dried, apply the RibbonLyte to the mounting surface inside of the channel. Make all necessary electrical connections.

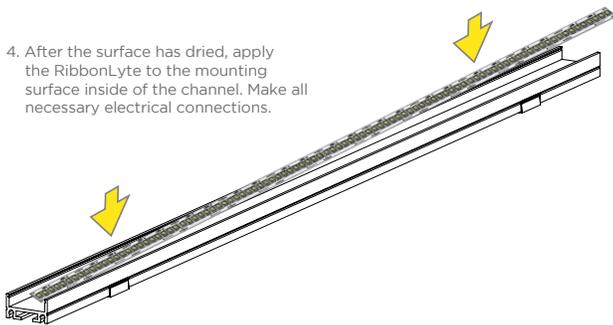

5. Apply glue at the edges of the lens and then attach the lens on channel securely.

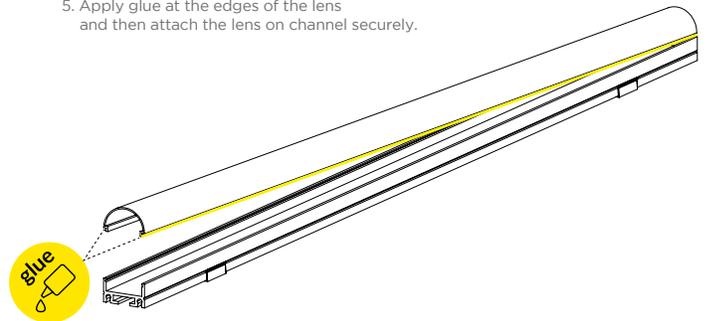

6. Insert the end caps.

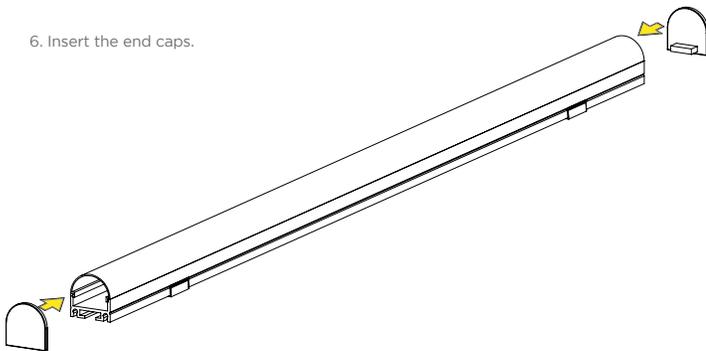

7. Fixture installation complete.

