


COMPONENTS:

A. SC-Corner1 Fixture

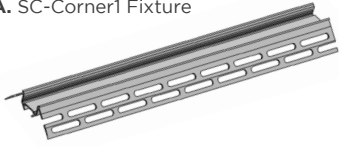

B. End Cap






C. Lens



INSTALLATION:

1. Measure and cut a recess of 0.84 inches in the drywall corner and place the Fixture (A) into the recess making sure the flanges sit flush on both walls.
2. Fasten the Fixture (A) by inserting drywall screws through the flanges on both sides approximately every 18".
(Recommended screw size: 4-40/48 countersunk flathead.)
3. Plaster over the flanges and screws up to the lip in the fixture to create a seamless joint. Use plaster tape to preserve the lens and visible portion of the Fixture (A).

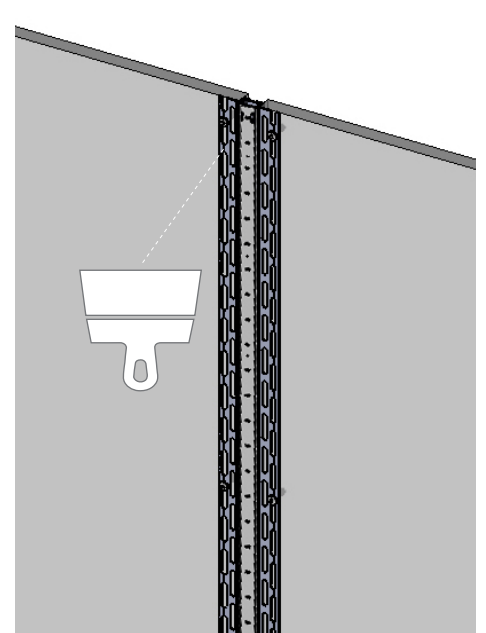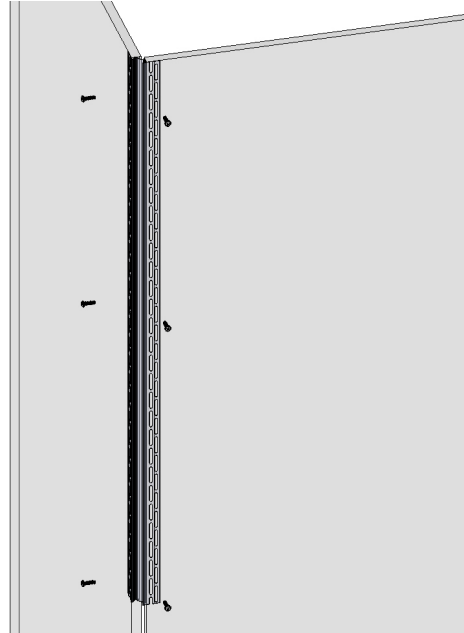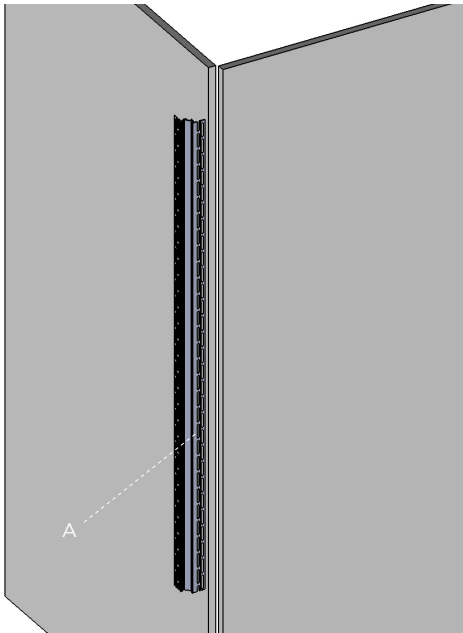

4. Insert the RibbonLyte into the Fixture (A).

5. Insert the Lens (C) by snapping it into place.

6. Press fit the End Caps (B).

7. Completed assembly.

