


**MATERIALS:**



Rubbing Alcohol  
(for metallic surfaces)



Silicone Pad



Screws




Maxtrix RibbonLyte


**SILICONE MOUNTING PAD INSTALLATION**




1. Clean the mounting surface of dust and debris with a damp cloth (wipe metallic mounting surface with rubbing alcohol) and dry.

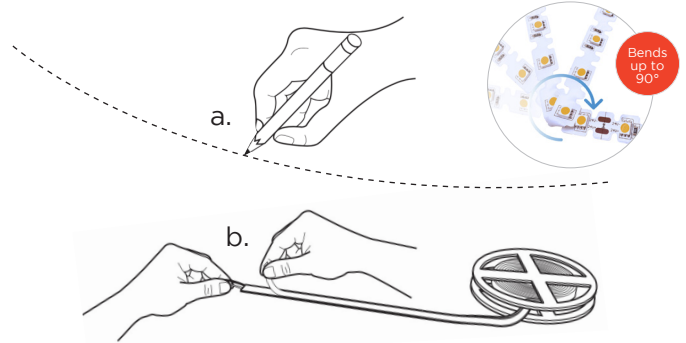

2. Map out path for Matrix RibbonLyte installation. Please note that Matrix RibbonLyte allows for bends of up to 90 degrees. Remove the backing from the adhesive on the RibbonLyte.

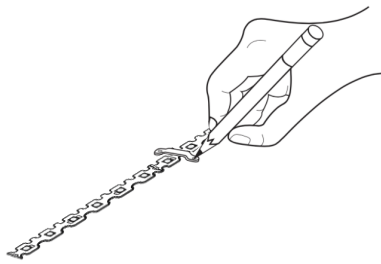

3. Place a silicone pad over Matrix RibbonLyte every 12 inches. Mark surface with a pencil for all pilot holes to be drilled. NEVER cover an LED with a silicone pad.

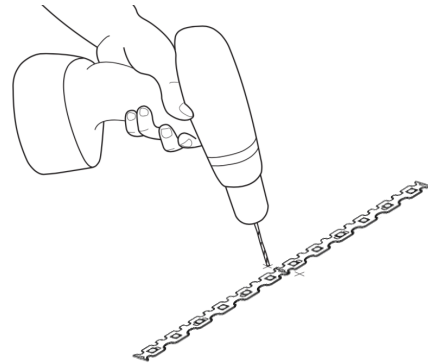

4. Drill pilot holes at center of each mark.



5. Tighten screws through silicone pads until Matrix RibbonLyte is securely in place.



6. Installation complete.