



**MATERIALS:**




**SILICONE MOUNTING PAD INSTALLATION**

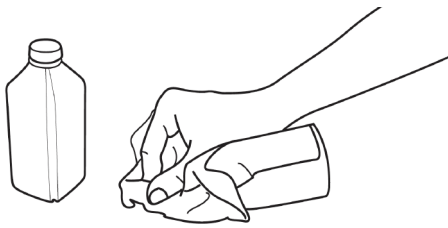


1. Clean the mounting surface free of dust and debris using a damp cloth. For metallic mounting surfaces, wipe clean with rubbing alcohol.

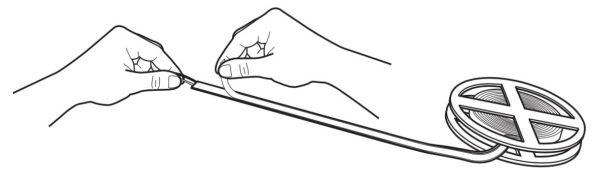


2. Remove the backing from the adhesive on the RibbonLyte.

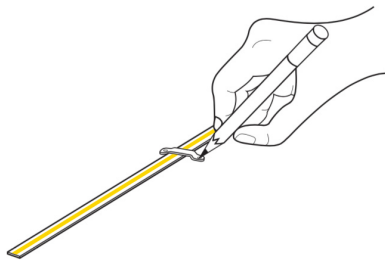


3. Place a silicone pad over RibbonLyte every 12 inches. Mark surface with a pencil for all pilot holes to be drilled. NEVER cover an LED with a silicone pad.

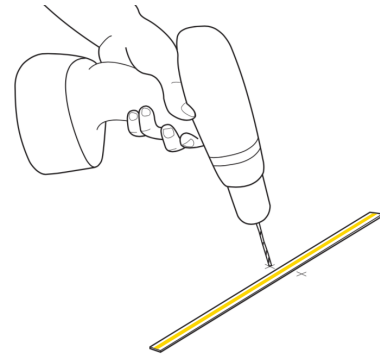

4. Drill pilot holes at center of each mark.

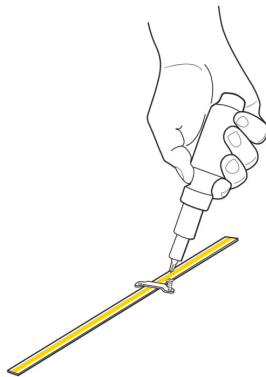

5. Tighten the screws through the silicone pads until RibbonLyte is tightly secured.

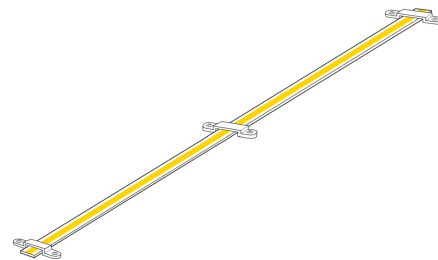

6. Your RibbonLyte installation is now complete.