


NEON APEX 3D W/ MOUNTING CLIPS:


1. Place the mounting clips every 6 in. (150 mm) along the desired path of the Neon Apex 3D and mark the locations for pilot hole drilling.



2. Drill pilot holes and then fasten the mounting clips to the surface using the screws.

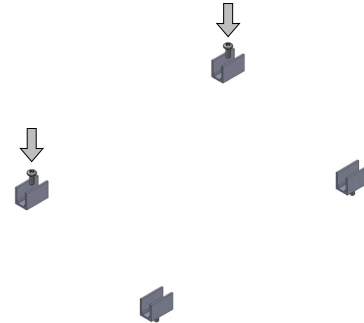

3. Push the Neon Apex 3D into place in the mounting clips and make all necessary electrical connections. All wires should be exposed, and the product is sealed. Do not cut the channel or remove end caps.

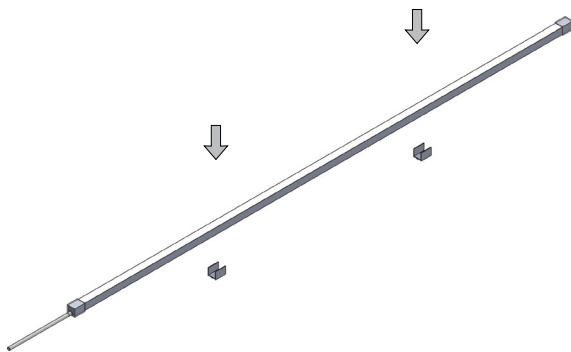

4. Installation complete.

