




1. Measure the size of the channel and mark desired location on mounting surface. Pre-drill any required holes to account for power feeds.

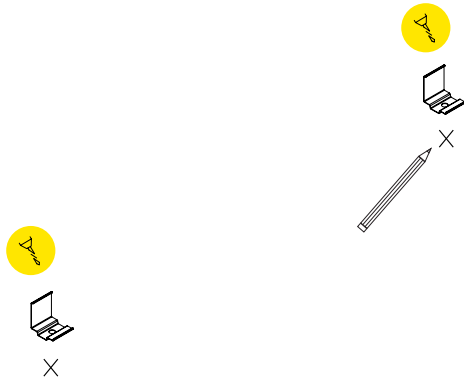


2. Clean the channel mounting surface so it is free of dust and debris using a cloth and rubbing alcohol. Dry.

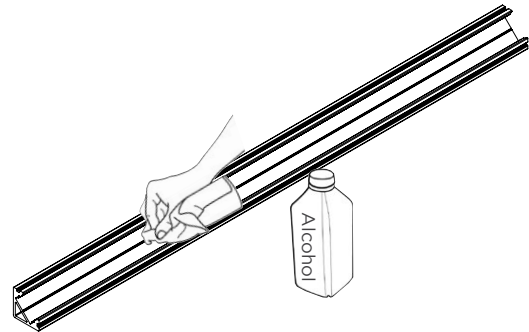


3. Secure RibbonLyte inside the channel. Make all necessary electrical connections. (Note: For end feed, be sure to thread wire through end cap but do not attach end cap to channel yet.)

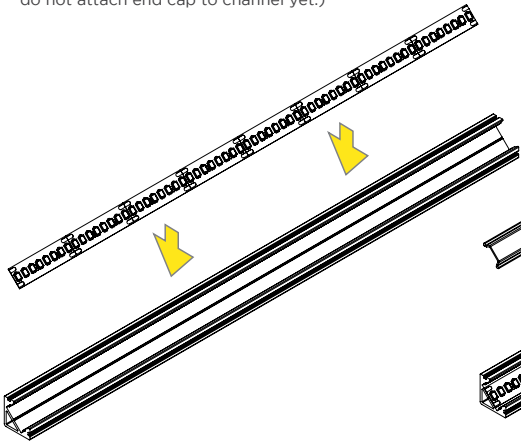


4. Snap lens in place.

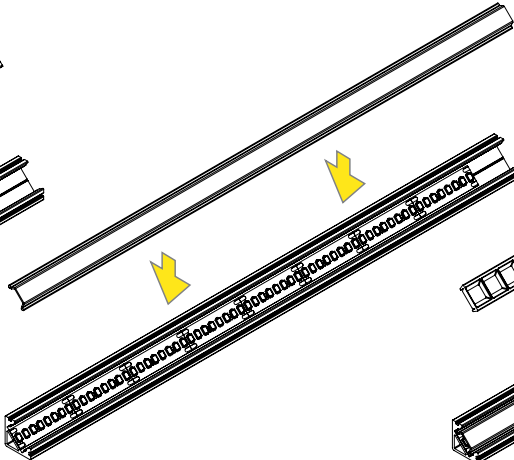

5. Snap louver in place.

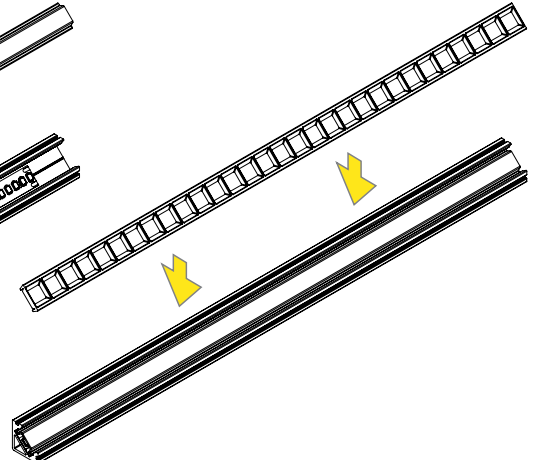

6. Attach end caps.

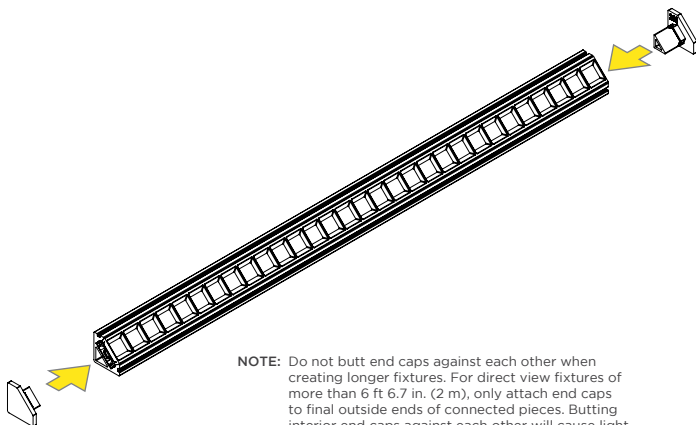

NOTE: Do not butt end caps against each other when creating longer fixtures. For direct view fixtures of more than 6 ft 6.7 in. (2 m), only attach end caps to final outside ends of connected pieces. Butting interior end caps against each other will cause light gaps or dead spots.

7. Align the channel above the mounting clips and push down to snap into place. AC15L fixture installation complete.

