




1. Measure the size of the channel and cut a recess into the mounting surface to match the size of the channel if needed. Account for power feeds and make sure the flanges will sit flush to the mounting surface.

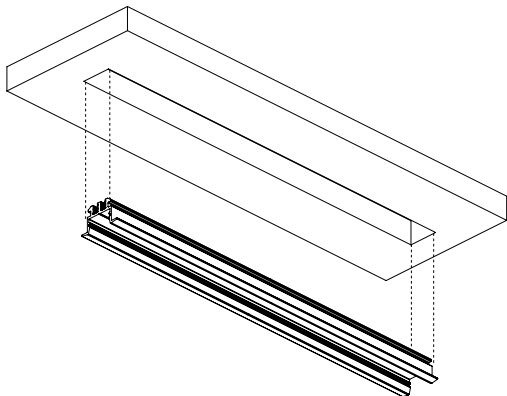


2. Clean the channel mounting surface so it is free of dust and debris using a cloth and rubbing alcohol. Dry.

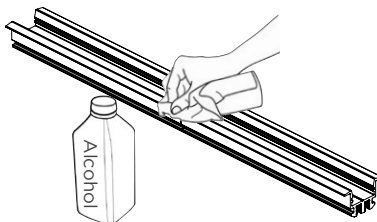


3. Secure RibbonLyte inside the channel. Make all necessary electrical connections. (Note: For end feed, be sure to thread wire through end cap but do not attach end cap to channel yet.)

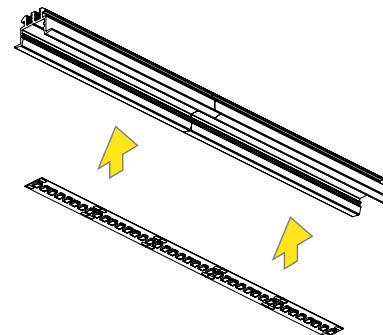


4. Snap lens in place.

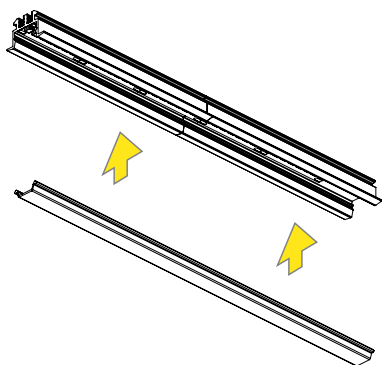

5. Snap louver in place.

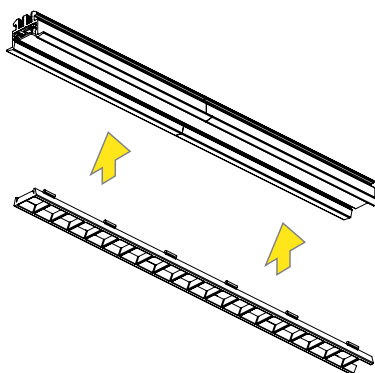


6. Attach friction fit end caps.

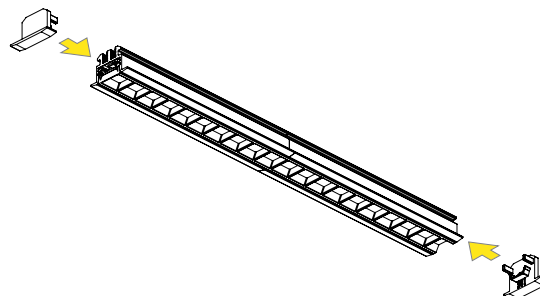

NOTE: Do not butt end caps against each other when creating longer fixtures. For direct view fixtures of more than 6 ft 6.7 in. (2 m), only attach end caps to final outside ends of connected pieces. Butting interior end caps against each other will cause light gaps or dead spots.

7. Attach spring clips (two per 2 m fixture) to the back of the channel surface with set screws (roughly 6 in. | 150 mm from each end).

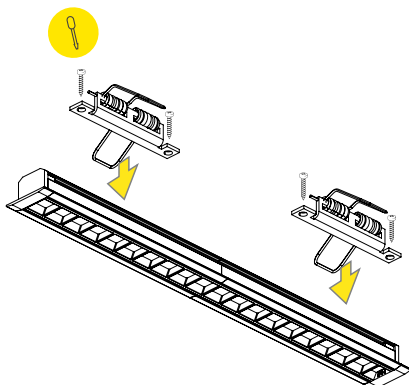

8. Fold spring clip arms up and place channel into the recess, allowing spring clip arms to flex down onto the back of the mounting surface to lock in position. AR15L fixture installation complete.

