




1. Measure the size of the channel and cut a recess into the mounting surface (drywall or gypsum board) to match the size of the channel. Account for power feeds and make sure the flange will sit flush to the mounting surface.

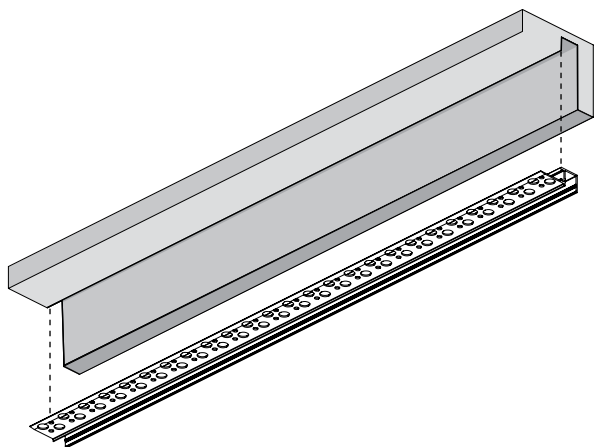


2. Clean the channel mounting surface so it is free of dust and debris using a cloth and rubbing alcohol. Dry.

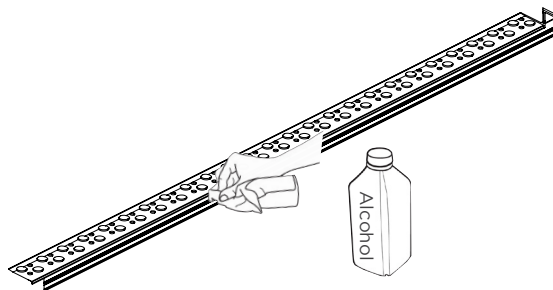


3. Secure RibbonLyte in the channel. Make all necessary electrical connections. (Note: For end feed, be sure to thread wire through end cap but do not attach end cap to channel yet.)

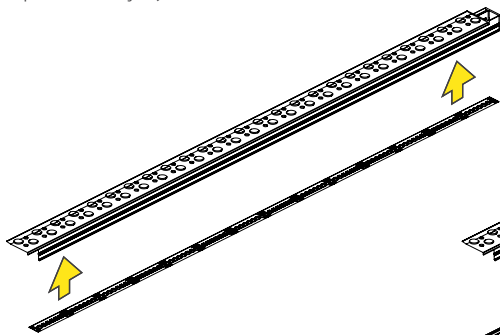


4. Snap lens in place.

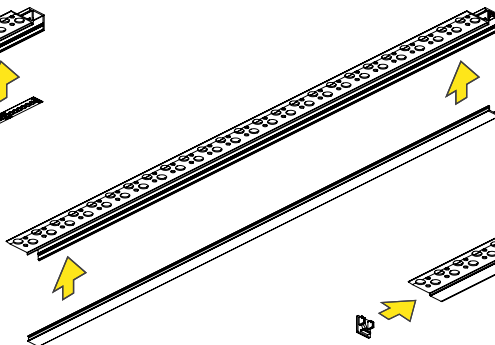

5. Attach friction fit endcaps.

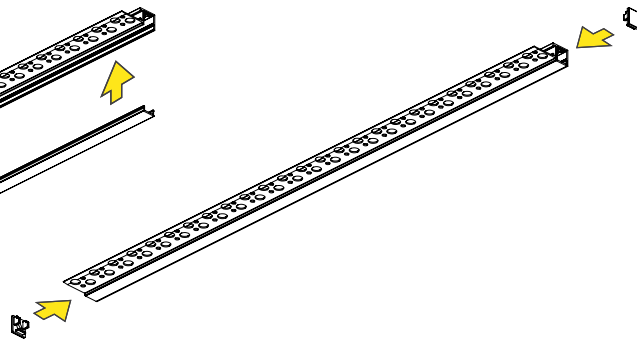

6. Fasten channel to surface by inserting drywall screws through the flange every 18 in. (roughly 45 cm).

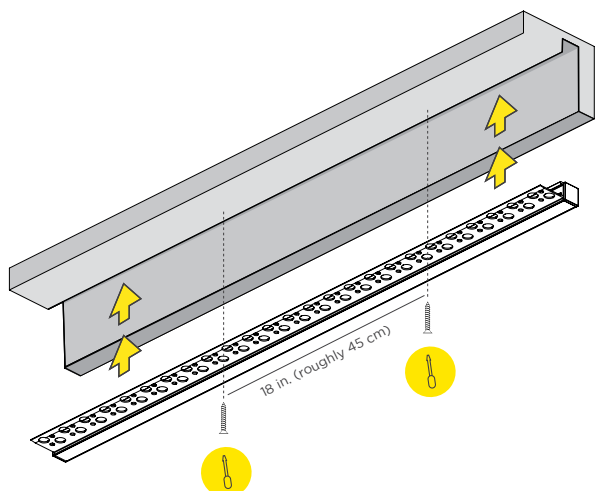

7. Apply plaster tape to protect visible portion of the fixture. Plaster over the flange and screws up to the lip in the fixture to create a seamless joint. Let plaster dry. Remove plaster tape. Fixture complete.

