GEN LED acolyte® Architectural Lighting Solutions

SC1 / SC2 INSTALLATION GUIDE

Tech Support: (+1) 212 629 6830 *301
Tech@GENLEDBrands.com

COMPONENTS:

A. L Bracket



B. Back Base



C. End Cap

D. Spring Clip Assembly

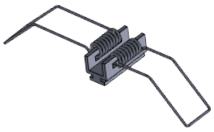

E. Trimless Kit Bracket

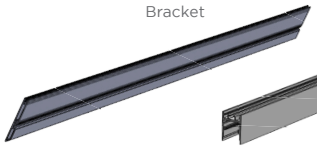

F. Fixture

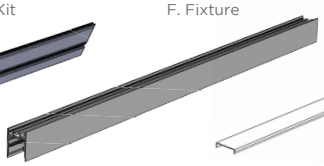

G. Lens

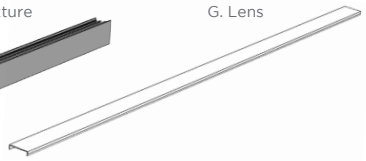

FIXTURE ASSEMBLY:

1. Drill hole in the Simply Clean Fixture (F) for wiring.

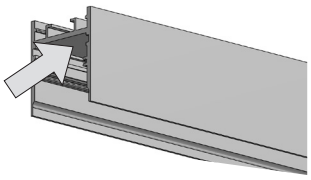

2. Apply double-sided tape. Then apply RibbonLyte into the Fixture (F).

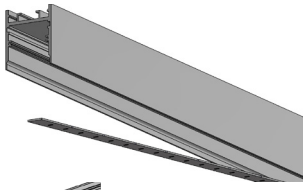

3. Feed power through drilled hole in the Fixture (F).

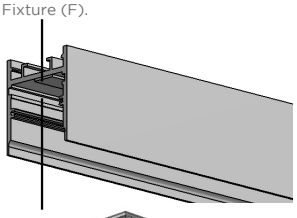

4. Snap the Lens (G) into place on the ridges of the Fixture (F).

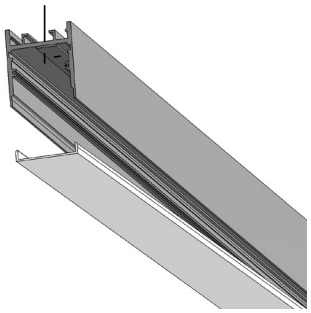

5. Fasten the End Caps to the Fixture (F).

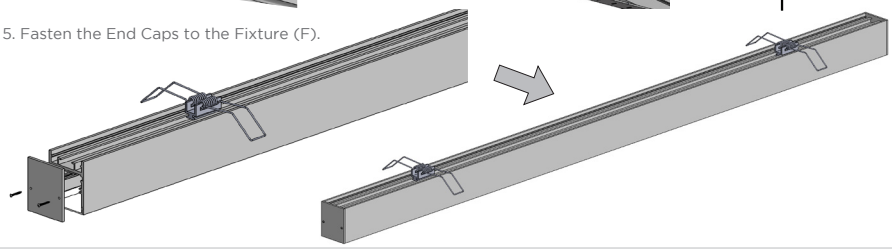

ASSEMBLY INSTALLATION:

1. Install the Back Base (B) onto the Trimless Kit Brackets (E). Install the L Brackets (A) onto Trimless Kit.

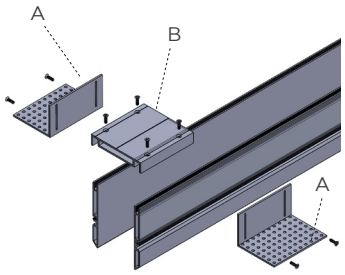

2. Cut hole in the ceiling to proper distance.

2.02 in (51.3 mm) for SC1
2.55 in (64.8 mm) for SC2

3. Adjust the height of Brackets (E) according to the thickness of drywall.

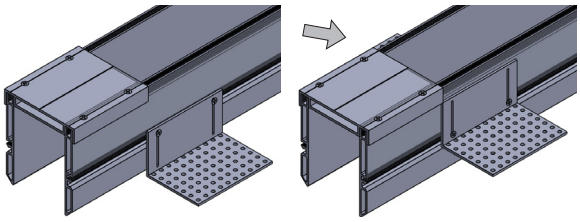

4. Turn the Recessed Assembly upside down and predrill pilot holes.

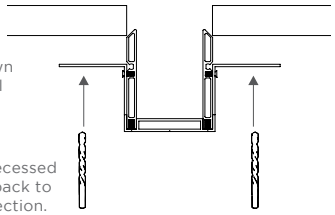

5. Turn the Recessed Assembly back to correct direction.

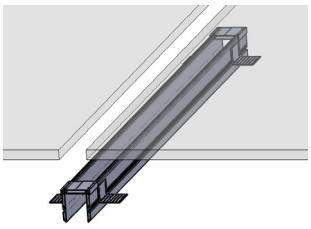

6. Tilt Recessed Assembly to go through the other side of wall.

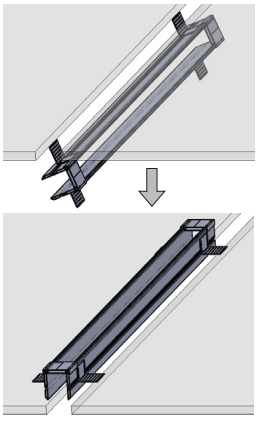

7. Fit Recessed Assembly in place, place Screws in predrilled pilot holes, and screw Fixture (F) onto wall.

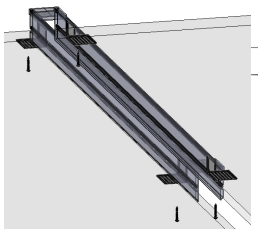

8. Fill plaster to create seamless surface.

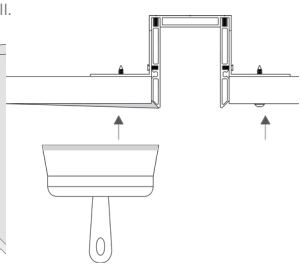

9. Feed wire through trimless kit to connect to power.

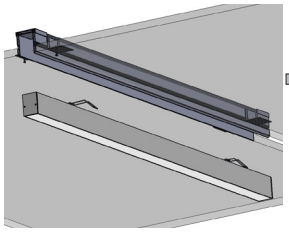

10. Push Light Engine Assembly (Part B) into Recessed Assembly (Part A).

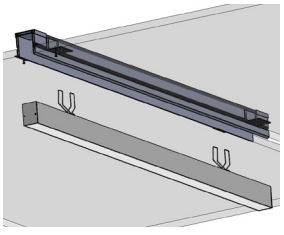

11. Fit Light Engine Assembly (Part B) into Recessed Assembly (Part A).

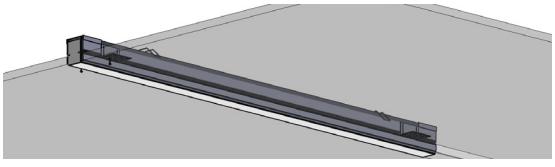

12. The assembly is complete.

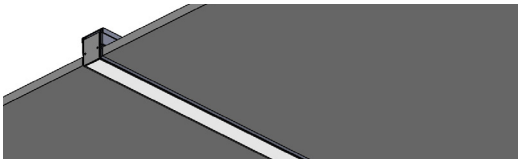

Tech Support: (+1) 212 629 6830 *301
Tech@GENLEDBrands.com

CONNECTING STRAIGHT FIXTURES:

1. Repeat Steps 1-4 in the previous section for assembling the fixture. Remove the end caps and back bases at the ends of the two fixtures to be connected. Attach the fixtures by installing a single back base over the two fixtures at the joint. Repeat Steps 4-11 in the previous section for inserting fixture into ceiling.

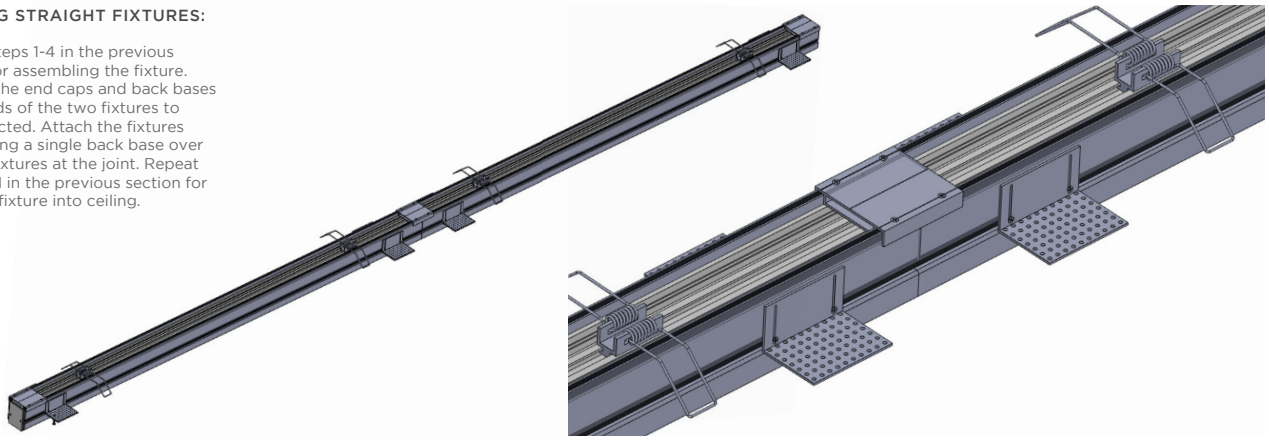

CONNECTING 2 FIXTURES AT CORNERS:

1. Miter the two Trimless Kit Brackets (E) at 45 degree angles, for both sets of fixtures. Do not miter the Light Engine Assembly (F).

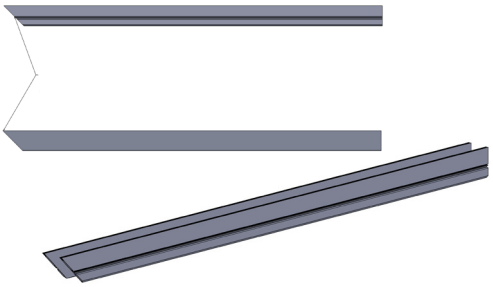

2. Reassemble the Trimless Kit (E) to the Simply Clean Fixture (F) making sure to align the end of the Fixture (F) to the inside edge of the mitered Brackets (E).

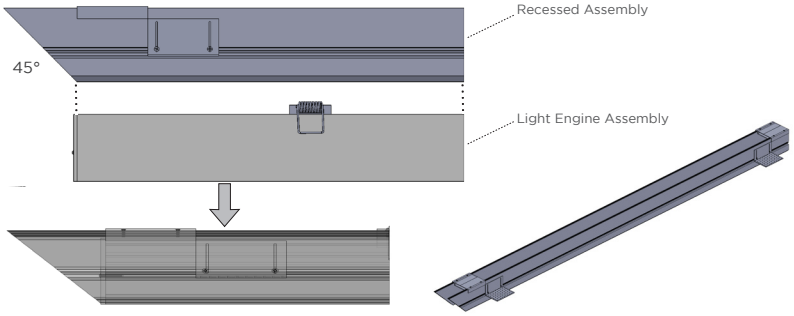

3. Place the two Fixtures (F) into their respective recess.

(drawing shown below wall/ceiling)

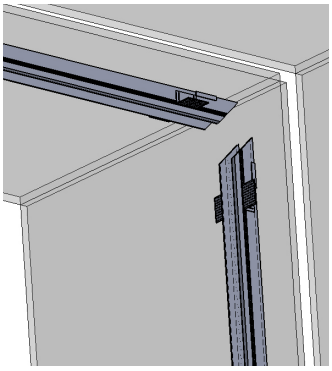

(drawing shown above wall/ceiling)

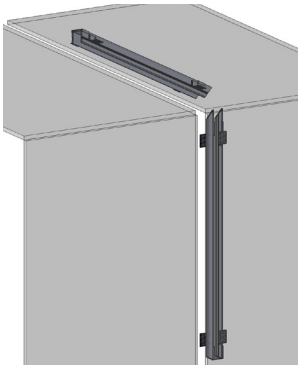

4. Position the two Fixtures (F) into the mitered corners.

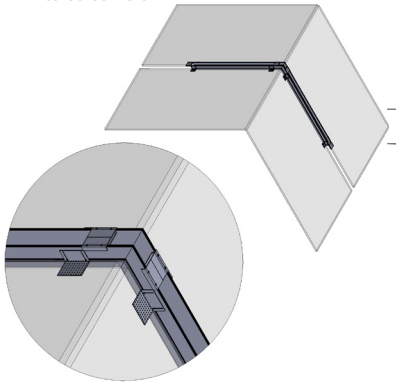

5. Fill plaster to create seamless surface.

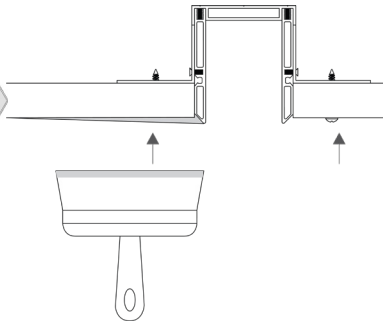

6. Connect Light Engine Assembly (Part B) to power. Fit Light Engine Assembly into Recessed Assembly (Part A).

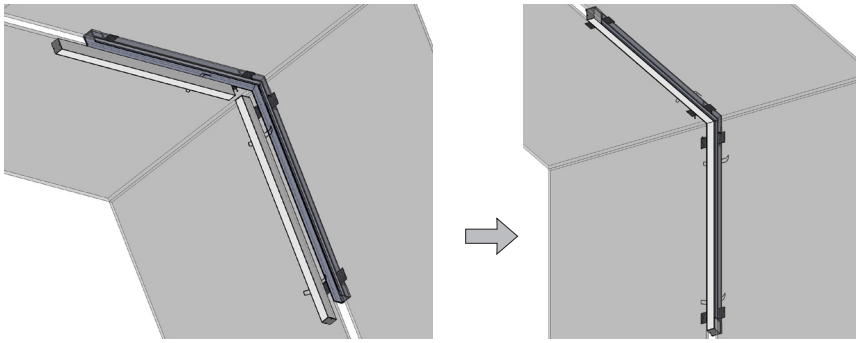

7. The Fixture connection is complete.

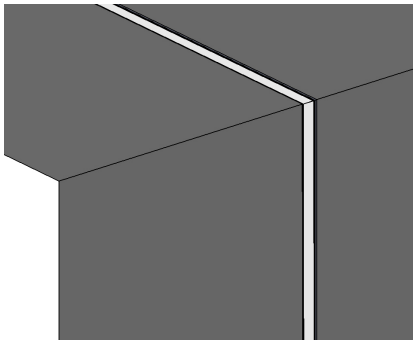

REV.03MAY2021