
GEN LED acolyte® Architectural Lighting Solutions

SCROLL50 INSTALLATION GUIDE

Tech Support: (+1) 212 629 6830 *301
Tech@GENLEDBrands.com

COMPONENTS:


A. Fixture Coupler



B. Strain Relief Bushing



C. Canopy

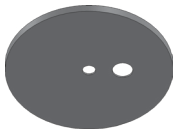


D. Coupler Top




E. Coupler Base



F. Junction Box

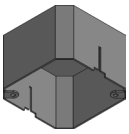

G. Cross Bar



H. Coupler



I. Coupler Base


J. Butterfly Toggle




K. Gripper




SUGGESTED WIRE SEPARATION:

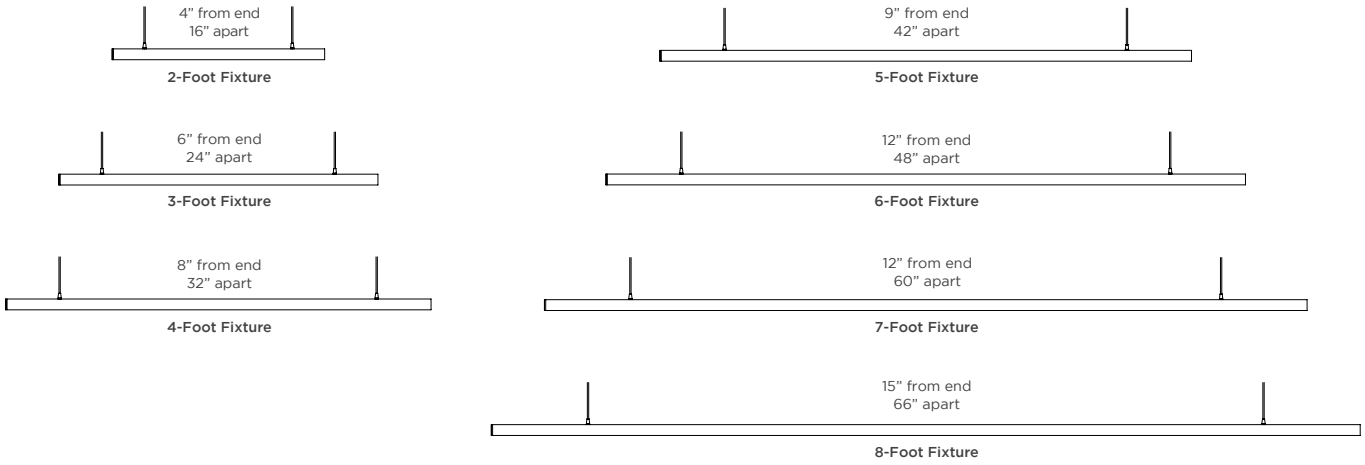

POWER CONNECTIONS:

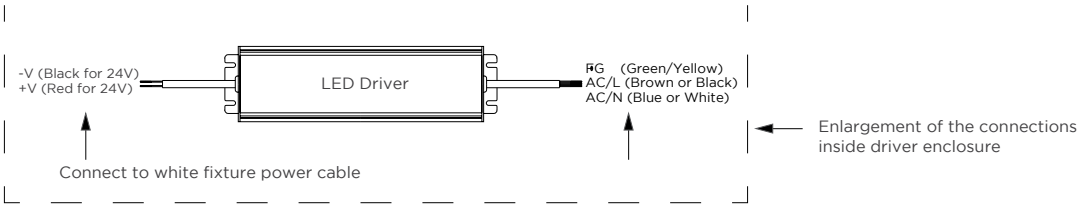


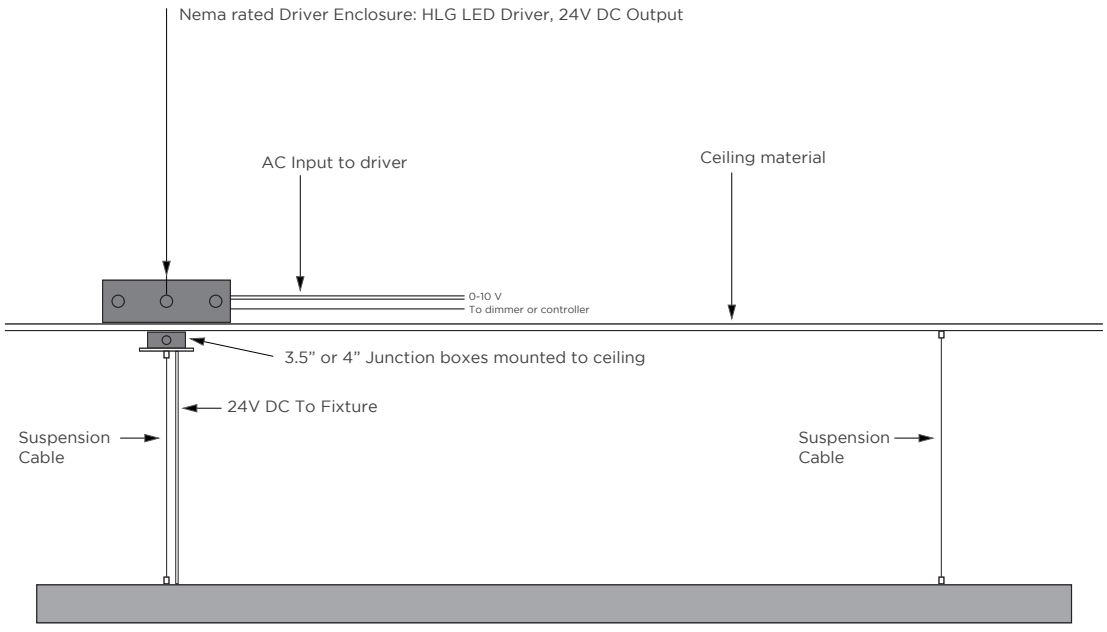


Tech Support: (+1) 212 629 6830 *301
Tech@GENLEDBrands.com

POWER FEED INSTALLATION:


1. Insert the wire through the Strain Relief Bushing (B), and then fit the wire with Strain Relief Bushing (B) into the Canopy (C).

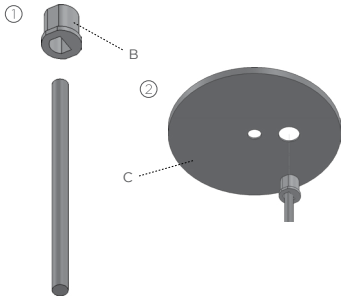


2. Attach the Cross Bar (G) to the Junction Box (F) with screws, & insert the screw into the hole in the center of the Cross Bar (G).

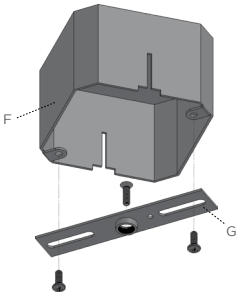


3. Put the aircraft cable through the Coupler Top (D) and Coupler Base (E) and pull the wire down, and then tighten the Coupler Base (E) onto the Coupler Top (D) as shown on ①. Put the Coupler Top and Base (D, E) with wire through the center hole on the Canopy (C) as shown on ②.

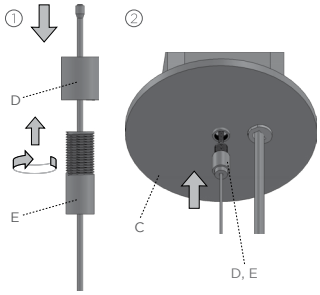

4. Put the screw in the center of the Cross Bar (G) on the Junction Box (F) through the Coupler Top and Base (D, E) and then tighten it.

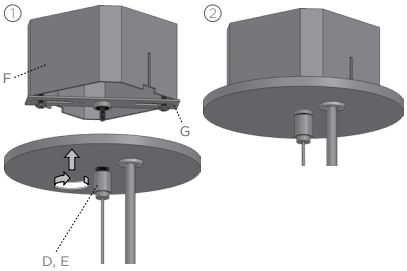

5. As an added precaution, make sure the coupler is tightened to the fixture securely. Adjust the cable length to desired height on top of the fixture, and cut excess cable off.

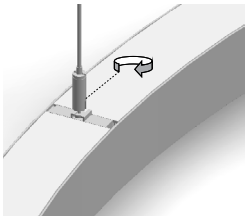


6. Power feed installation complete.




DIRECT-ONLY INSTALLATION WITH HARD CEILING:

1. Repeat Steps 1-5 of the power feed installation.

2. For non-power feed side of the fixture, follow these steps. Mark the desired hanging point on the ceiling and drill a 1-1/2" deep hole into the concrete with a 3-1/2" long, 5/32" drill bit.




3. Insert anchor into drill hole.




Not supplied by Acolyte


4. Use screw to attach Coupler (H) so that it is flush with the ceiling.

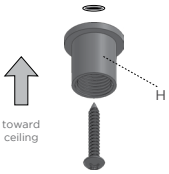

5. Slide aircraft cable through opening of Coupler Base (1) so the end of the cable with the metal stopper is pulled snug against the small opening on the inside (2). Screw Coupler Base into Coupler (3).

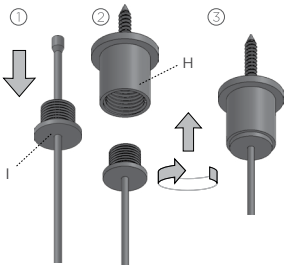

6. As an added precaution, make sure the coupler is tightened to the fixture securely.

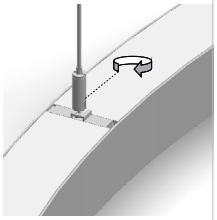


DIRECT-ONLY INSTALLATION WITH DRYWALL/GYPSUM CEILING:

1. Repeat Steps 1-5 of the power feed installation (top).


2. Slide Aircraft Cable through opening of Coupler Base (I) so the end of the Cable with the Metal Stopper is pulled snugly against the small opening on the inside of the Coupler Base (I). Put the Butterfly Toggle (J) through the Coupler (H). Fold the Butterfly Toggle (J) to fit through drilled hole in drywall.

3. Make sure Coupler (H) is securely attached to the drywall, and then attach Coupler Base (I) to Coupler (H).

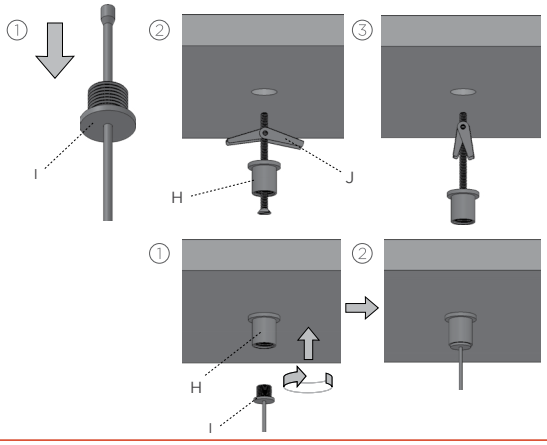


CONNECTING MULTIPLE FIXTURES:

1. Slide the Grippers (K) on to the top of fixtures. Slide the Fixture Coupler (A) into fixtures, match the screw holes on the fixtures and the Fixture Coupler (A), and then tighten the screws.

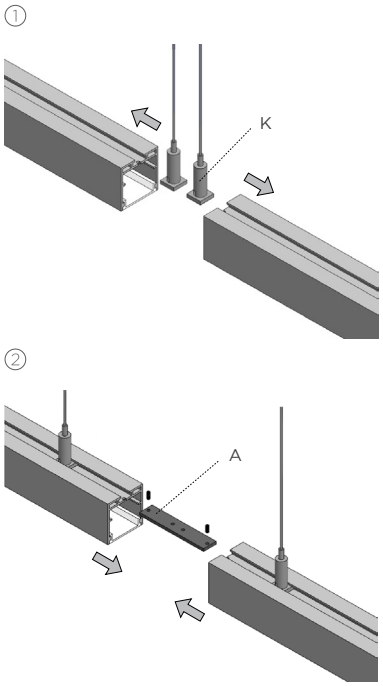

2. Installation completed (one driver is needed for each fixture).

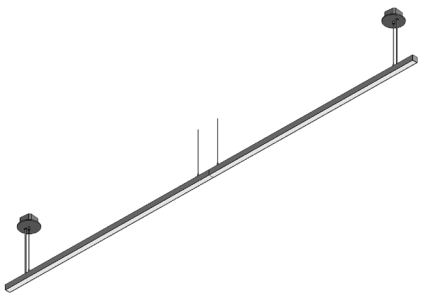

GEN LED acolyte® Architectural Lighting Solutions


SURFACE MOUNTED SCROLL50 INSTALLATION GUIDE

FOR DIRECT LIGHTING MODELS ONLY


Tech Support: (+1) 212 629 6830 *301
Tech@GENLEDBrands.com

NOTE: Surface mount installations are for direct lighting models only.


1. Review Scroll shop drawings and locate the power feed entry holes and defined luminaire mounting positions. (Countersink holes are included in the channel for surface mounting.) Carefully measure and mark these spots on the mounting surface, then drill pilot holes.

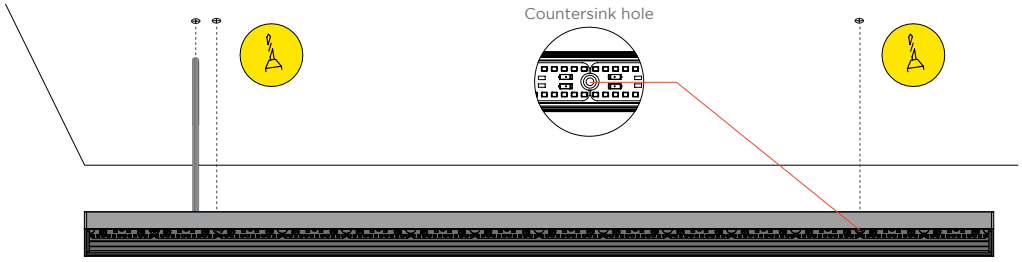


2. Gently tap wall plugs into the pilot holes.

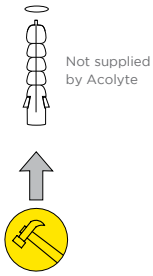


3. Make electrical connections. Then use self-tapping screws to secure the Scroll fixture to the surface. (NOTE: Support fixture during installation. This is likely at least a two-person job.)

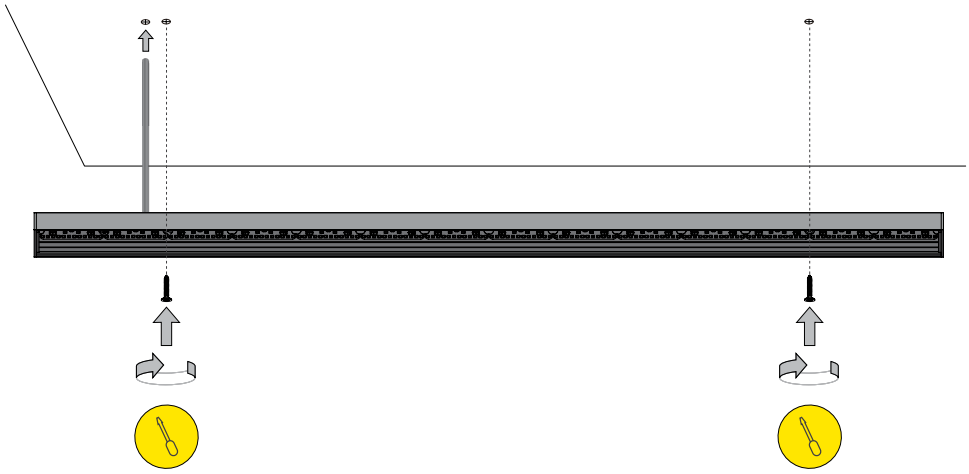

4. Install the lens.

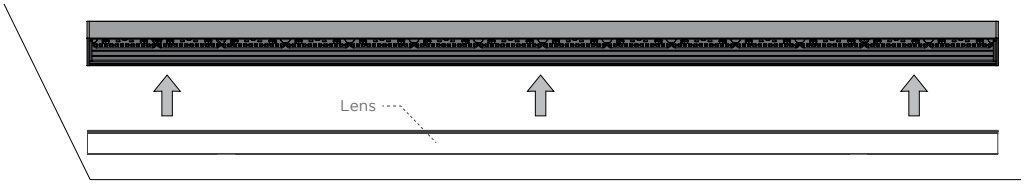

5. Installation complete.

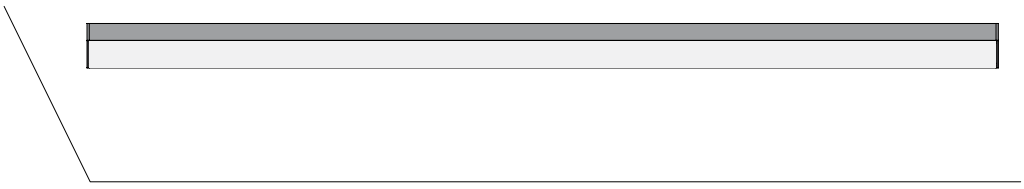

GLOBAL HQ
U.S., Canada, Central and South America
E: Sales-US@GENLEDBrands.com
T: (+1) 212 629 6830

EUROPEAN HQ
Europe & the UK
E: SalesEurope@GENLEDBrands.com
T: (+31) 346 235 000

MEINA HQ
Middle East, India, Africa
E: SalesMEINA@genledbrands.com
T: (+971) 4 701 7901

ASIA-PACIFIC HQ
Asia, Australia & the Pacific Islands
E: Sales-Pacific@GENLEDBrands.com
T: (+86) 755 8529 0710

AcolyteLED.com

REV.12NOV26