




1. Measure and mark the desired location of the mounting clips. Drill pilot holes for mounting clips. Affix mounting clips to the surface with screws.

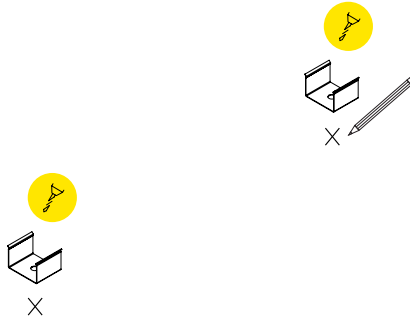


2. Clean the inside surface of the channel of dust and debris with rubbing alcohol. Dry, then apply RibbonLyte. Make all necessary electrical connections. (Note: For end feed, be sure to thread wire through end cap but do not attach end cap to channel yet.)

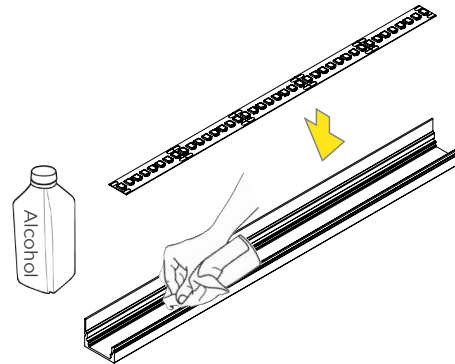


3. Snap lens into place.

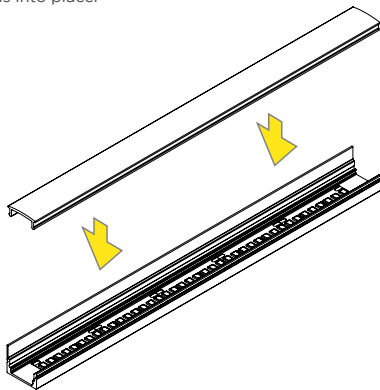

4. Attach end caps.

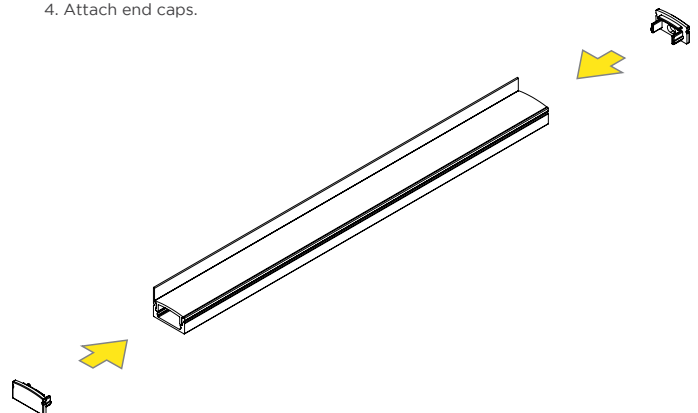

5. Align the channel above the mounting clips and push down to snap into place.

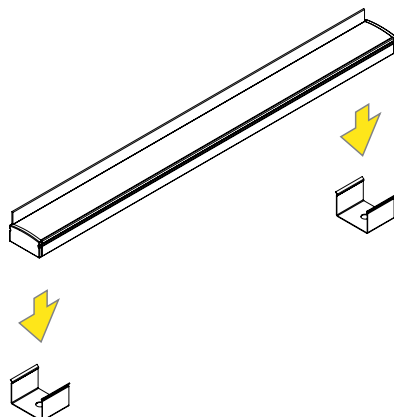

6. AS1GS fixture installation complete.

